

Lab 6a: Pole Placement for the Inverted Pendulum

“Idiot. Above her head was the only stable place in the cosmos, the only refuge from the damnation of the Panta Rei, and she guessed it was the Pendulum’s business, not hers.” – Umberto Eco (from Foucault’s Pendulum)

1 Objectives

The objective of this lab is to achieve simultaneous control of both the angular position of the pendulum and horizontal position of the cart on the track using full-state feedback. We will be considering small angle perturbations and sine wave reference tracking of the cart position. Note that the system is a SIMO – a Single Input Multiple Output – system, since we are trying to control both the position of the cart and the angle of the pendulum by using only the motor voltage.

2 Theory

The setup consists of a pendulum attached to the movable cart from Labs 3 and 4. The free body diagram of this setup is shown in Figure 1. We ignore friction and assume that the mass of the rod is uniformly distributed, e.g. its center of mass is located at the center of the rod, $L_p = L/2$. N and P are the horizontal and vertical components, respectively, of the reaction force between the cart and the pendulum. The parameter values of the physical system are given in Table 1 in the Appendix.

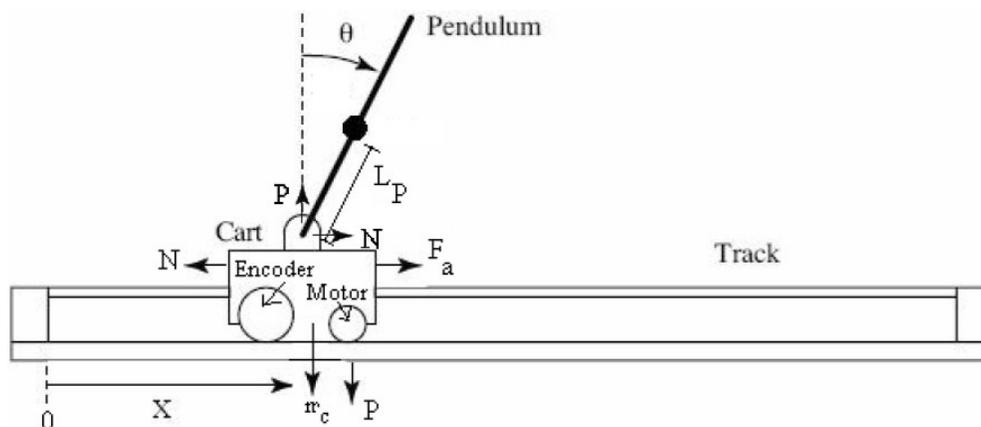


Figure 1: Free body diagram of the inverted pendulum setup (ignoring friction)

3 Pre-Lab

3.1 Equations of Motion of the Mechanical System

Under the small-angle approximation $\sin \theta \approx \theta$ and $\cos \theta \approx 1$, derive the equations of motion (1) and (2) of the inverted pendulum-cart system. In (1), F_a is the force exerted on the cart by the motor.

$$(M + m)\ddot{x} + mL_p\ddot{\theta} = F_a \quad (1)$$

$$mL_p\ddot{x} + \frac{4mL_p^2}{3}\ddot{\theta} - mgL_p\theta = 0 \quad (2)$$

One way of doing this is by considering the free-body diagrams of the cart and the pendulum separately and writing their respective equations of motion.

Hint: Consider the following force/torque balance equations: horizontal acceleration on the cart, acceleration of the center of mass of the pendulum, and torsion of the pendulum. An easy way to analyze the torque equation for the pendulum is to consider its motion as observed from the frame of the cart. However, this will introduce a ‘fictitious’ force, known as D’Alembert’s effect. The associated free body diagram of the cart and the pendulum are given in Figure 2 and Figure 3, respectively. Apply Newton’s laws to obtain the required equations.

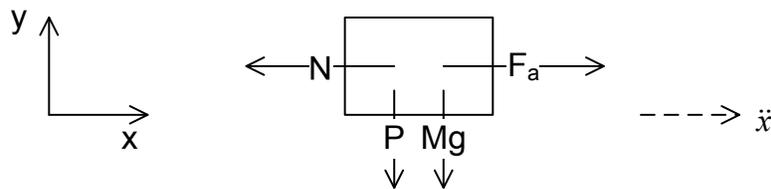


Figure 2: Free body diagram of the cart (ignoring friction; normal force not depicted)

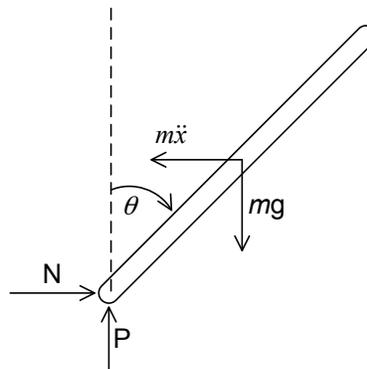


Figure 3: Free body diagram of the pendulum (ignoring friction; the $m\ddot{x}$ vector will appear in the torsion equation due to D’Alembert’s effect)

3.2 Full System Dynamics of Linearized System

1. Use the motor dynamics derived in Lab 3 (in the form $F_a = f(V, x, \dot{x})$) and substitute them into the linearized cart-pendulum dynamics from the previous section to obtain the complete system dynamics. The outputs of interest for us are x , the position of the cart, and θ , the pendulum angle. The control input available is V , the voltage applied to the motor. Thus, our system is a 1-input, 2-output system (SIMO).
2. Now derive the state-space model (A , B , C and D matrices) for the complete system. Use $\mathbf{x} = [x \ \dot{x} \ \theta \ \dot{\theta}]^T$ as your state vector. Make sure you do this derivation *symbolically*. Your A and B matrix should be of the following form:

$$A = \begin{bmatrix} 0 & a_{12} & 0 & 0 \\ 0 & a_{22} & a_{23} & 0 \\ 0 & 0 & 0 & a_{34} \\ 0 & a_{42} & a_{43} & 0 \end{bmatrix} \quad B = \begin{bmatrix} 0 \\ b_2 \\ 0 \\ b_4 \end{bmatrix} \quad (3)$$

Once you have the expressions for your state space representation, use a MATLAB script file to plug in your values. This will make things much easier if parameters need to be adjusted.

3.3 Analysis and Controller Design

1. Determine the eigenvalues of the state matrix A and the poles of the state-space representation. Is the open-loop system internally stable? Is it BIBO stable? (for this part, you can use the MATLAB command `eig`).
2. Simulate the output response of the system for a step input in the motor voltage. What would you expect to happen to x and θ in the physical system (assuming infinite track length)? What are the discrepancies between the simulation and the physical system? Why might be the reasons for these discrepancies?
3. We will use a full state-feedback controller to achieve the desired performance specifications. For the purpose of design, we assume that all the state variables are available for measurement and can use them for feedback (i.e. the entire state vector \mathbf{x} is known). The full-state feedback controller is $u = -K\mathbf{x}$. The gain matrix K is chosen such that the closed-loop eigenvalues lie at some desired values. These desired values of the eigenvalues are found based on the performance specifications desired to be achieved. We would like our closed-loop eigenvalues to lie at $s_{1,2} = -2.0 \pm 10j$ and $s_{3,4} = -1.6 \pm 1.3j$. In lecture you will discuss design techniques for determining these values. For the purpose of this lab we will assume them given.
 - (a) The feedback gain matrix K is of the form $K = [k_1 \ k_2 \ k_3 \ k_4]$. The closed-loop system matrix is given by $A_K = A - BK$. Using your A and B matrices (with the values plugged in) from (3), compute the matrix A_K as a function of the k_i .
 - (b) Compute the characteristic polynomial $P(K; s) = \det(sI - A_K)$ of the closed-loop system as a function of k_1 through k_4 .
 - (c) Compute the *desired* characteristic polynomial $P_{des}(s) = \prod_{i=1}^4 (s - s_i)$ determined by the desired locations of the closed-loop poles given above.

- (d) Comparing the coefficients of $P(K; s)$ and $P(s)$, determine the system of linear equations that the gains k_1, \dots, k_4 have to satisfy. Plug in numerical values and use MATLAB to solve for K .
- (e) Now verify the result you obtained for K using MATLAB. You may use the `acker` or `place` commands for pole placement.
4. With input $u = K(\mathbf{r} - \mathbf{x})$, the dynamics of the closed-loop system are $\dot{\mathbf{x}} = A\mathbf{x} + Bu = A_K\mathbf{x} + BK\mathbf{r}$, where \mathbf{r} is your reference input. Observe that the reference input has the same dimension as the system state. Using the calculated gain matrix K and MATLAB, calculate the closed loop transfer function from the first component in the reference \mathbf{r} (position reference input) to the output x (the position of the cart). Plot the step response for this transfer function. You should notice that the DC gain for this transfer function is unity.
5. Letting the position reference input, $R_{pos}(s)$, be a sine wave, plot the position output using frequencies $\omega = 1, 2, 5$ rad/s. Plot these on separate plots with the corresponding reference input superimposed, and compute the DC gain by computing the ratio of the amplitude of the system's output to the amplitude of the input sine wave. Be sure that the plots show at least 3 whole periods. *Hint:* You can use time-domain, or: in the frequency domain, a sine wave input with frequency ω rad/s is:

$$R_{pos}(s) = \frac{\omega}{s^2 + \omega^2}$$

4 Lab

During this lab, you will implement your state-feedback controller from the PreLab and run it on the actual hardware. Make sure to save all the models and script files used and attach them to your lab report submission.

4.1 Implementing the Controller in Simulink

Implement the state-feedback controller with the Quanser I/O blocks in Simulink. Here is a review of some of the blocks you will use:

- HIL Initialize block: change the board type to Q4 (green board) or Q2-USB (black box) according to which one you have
- HIL Read Encoder Timebase block: change the encoder indices to $[0, 1]$ to obtain readings from both encoders; channel 0 is position, channel 1 is angular
- HIL Write Analog block: see notes about gear protection below
- dx/dt derivative blocks: The encoders only provide measurements for x and θ . We will need to approximate \dot{x} and $\dot{\theta}$ in order to perform full state feedback. In this lab, we will use the derivative blocks for this (taking numerical derivatives should generally be AVOIDED). In one of the following labs, you will build an observer and estimate the \dot{x} and $\dot{\theta}$ from the measurements of x and θ alone.
- Mux and Demux blocks: This will help keep your diagram tidy. You can combine all four signals ($x, \dot{x}, \theta, \dot{\theta}$) into a “vector” signal with the mux block, and break them out with the demux block.
- Gain block: You can use a single gain block to implement the matrix K . Change the “multiplication” option from “element-wise” to “matrix”.
- Scopes and “To Workspace” blocks: Don’t forget to instrument your system to allow you to save data for your lab report.

Gear Protection In order to prevent the gear from slipping, you must put a saturation block before the Analog Output block. You have two choices:

- a conventional saturation block, set to $\pm 6V$ as in Lab 3 and 4. **Try this first.**
- An Embedded MATLAB code block using the following code, if conventional saturation doesn’t work:

```

1 function []u_sat]= fcn(xdot,u)
2     % Setting the bounds
3     max_lim = min(8,max(4,10*xdot+5));
4     min_lim = min(-4,max(-8,10*xdot-5));
5     % Dynamic Saturation
6     u_sat = max(min_lim,u);
7     u_sat = min(max_lim,u_sat);
8 end

```

You must connect this block to the \dot{x} signal as well as the control signal for saturation. It applies different bounds depending on \dot{x} : once the cart is moving, it allows higher “forward” voltages, while prohibiting big “reverse” voltages. The `u_sat` output is the saturated signal, while `max_lim` and `min_lim` allow you to plot/analyze the limits.

Sign of θ The direction we have defined θ to increase and the direction the hardware encoder increases are *reversed*. **Make sure to use a negative factor for angular unit conversion!**

Units Watch your units. Everything in this system should match the units you used for your state-space derivation. When in doubt, always work with SI units.

4.2 Running the Controller on the Hardware

1. Run the controller on the hardware (with reference \mathbf{r} set to $\mathbf{r} = [0\ 0\ 0\ 0]^T$) and make sure it balances. Be ready to lift the cart off the track in case it runs away.

Important: *You will need to hold the pendulum exactly vertical before connecting to the real time target (our controller tries to stabilize the unstable equilibrium $\theta = 0$, and the encoder position is reset to zero every time you connect to the hardware). What do you think would happen if you were to connect to the hardware with the pendulum in its stable equilibrium position?*

2. With the pendulum balancing, manually apply *small* perturbations to the pendulum and check the response. Make sure to start the system with the cart in the center of the track, so there is enough space for the controller to move the cart and “catch” the pendulum.
 - (a) If you perturb the top of the pendulum in a given direction, how does the controller actuate the cart? Why is this?
 - (b) Plot the variation of the cart and pendulum position with time for small perturbations (manually-induced) about the equilibrium value. Comment on the controller’s general performance. *Why does the hardware continue to oscillate about the equilibrium point?*
3. Introduce a sine wave reference signal and analyze the results. Your reference input will be $\mathbf{r} = [M\sin\omega t\ 0\ 0\ 0]^T$. Start with a reasonable amplitude ($M \approx 0.1\text{ m}$), and use frequencies $\omega = 1, 2, 5\text{ rad/s}$. Again make sure to start at the center of the track and to hold the pendulum vertical when you start the program. Check your response and include plots of cart position, cart velocity and pendulum angle in your report.
 - (a) Calculate the approximate DC gain for your system for each sine wave input. How do your values compare to the values computed in the pre-lab for each frequency? If not, explain possible causes for the difference. *Note that your system output will not be a “perfect” sine wave as in simulation. Compute an approximate DC gain by collecting multiple periods of position data and averaging.*
 - (b) Slightly change the position of the desired closed-loop poles. Try a couple of different values and run the resulting controllers on the hardware. Again include plots of cart position, cart velocity and pendulum angle in your report. Discuss how the changes in the position of the poles affect the behavior of the system. You do not need to repeat part 3a.
4. Plot the cart velocity \dot{x} and the pendulum’s angular velocity $\dot{\theta}$, which are obtained by numerically differentiating the signals x and θ , respectively. Comment on the quality of the obtained signals.

A System Parameters

Parameter	Value	Description
	439.6 counts/cm	Resolution of the cart position encoder
	651.9 counts/rad	Resolution of the angle encoder
M	0.94 kg	Mass of cart and motor
m	0.230 kg	Mass of pendulum
L_p	0.3302 m	Pendulum distance from pivot to center of mass
I_c	$m L_p^2/3$	Moment of inertia of pendulum about its center
I_e	$4m L_p^2/3$	Moment of inertia of pendulum about its end
K_t	$7.67 \cdot 10^{-3}$ Nm/A	Motor torque constant
K_m	$7.67 \cdot 10^{-3}$ Vs/rad	Motor back EMF constant
K_g	3.71	Motor gearbox ratio
R_m	2.6Ω	Motor winding resistance
r	$6.36 \cdot 10^{-3}$ m	Radius of motor gear
J_m	$3.9 \cdot 10^{-7}$ kg m ²	Motor moment of inertia

Table 1: Parameters of the inverted pendulum setup